

2004



Scheduled Maintenance Guide

**N**ow that you've got your Scion on the road, you want to make sure it keeps going. That's where scheduled maintenance comes in. Taking your car in for regular service will help your ride run better and last longer. It will keep your repair bills down, too.

This booklet makes it easy to keep your Scion running smoothly. The maintenance log lists all the factory-recommended services and tells you when your vehicle needs them. You'll also find information on how Scion and your dealership can help you with maintenance and repairs.

Be sure to look this booklet over carefully and keep it in your glove box. Do what it says and your Scion should be happy for many miles to come.

### Complimentary Oil Changes

To help you get started with regular maintenance, Scion provides your vehicle's first three oil changes on a complimentary basis. To find out how to obtain your complimentary oil changes, see page 17.

Remember that changing the oil is just one of the maintenance services that should be performed regularly on your Scion. Make sure that all the other services recommended in this booklet are performed on your car as well.

### Put It In Writing

To help you keep track of your Scion's service history, each maintenance chart in this booklet includes:

- > Boxes to check for each service item performed
- > Space for the maintenance provider to include a service verification stamp
- > Space to write the date and mileage that service is performed

Documenting your service history may make your car worth more when you're ready to sell. There's a reason smart people write things down.

In addition to scheduled maintenance, your vehicle requires general maintenance such as fluid checks and visual inspections. These procedures are explained in the "Vehicle Maintenance and Care" section of the *Owner's Manual*. To keep your Scion out of trouble, be sure to perform these procedures regularly.

### Maintenance Records

To make sure your warranty coverage stays intact, you need to maintain your Scion according to the recommendations in this booklet. You should keep records of vehicle maintenance, including date and mileage at time of service and a description of service items performed and parts installed. The scheduled maintenance log can help you keep track of this information. If you sell your car, be sure to give your maintenance records to the new owner.

Scion will not deny a warranty claim solely because you don't have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

### Maintenance Providers

You can have maintenance and repair services done by any automotive service provider you choose, or you can do them yourself. Scion won't deny a warranty claim solely because you used a service provider other than a Scion dealership for maintenance and repairs. However, damage or failures caused by improper maintenance or repairs are not covered under warranty.

**Note:** Only Scion dealerships and Toyota dealerships are authorized to provide warranty service/repairs for your Scion.

### Dealer-Recommended Maintenance

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. You don't need to have these additional services performed to maintain your warranty coverage. Ask your dealer to explain any recommended maintenance that is not included in the scheduled maintenance log.

For a complete description of Scion warranty coverages, check out the booklet called *2004 Owner's Warranty Information*. You'll find it in your glove box.

## »» Table of Contents ««

### Scion Maintenance & Repair Support

Scion Dealership Service _____	2
Scion Authorized Parts _____	3
Collision Repair Parts _____	4
Lifetime Guarantee Replacement Parts _____	6
Scion Authorized Accessories _____	7
Scion Service Manuals _____	8
Service Agreements _____	9

### General Maintenance Information

Determining Your Scion's Maintenance Needs _____	10
Explanation of Maintenance Items _____	12
Vehicle Identification _____	15

### Scheduled Maintenance Log

Following the Charts _____	16
Complimentary Oil Changes _____	17
Maintenance Log _____	18

## » Scion Dealership Service

It's nice to know you can count on your ride. When you get in your Scion, it gets you where you're going. To make sure that happens every time, Scion recommends that you go to an authorized Scion dealership when your car needs service.

Scion dealership technicians are Scion experts. They keep up with the latest service information through Scion technical bulletins, service publications and training courses. Many are also factory-certified. That means they've completed state-of-the-art training and passed rigorous exams through both Scion and the National Institute for Automotive Service Excellence. In other words, these techs are good. And they know your car.



You made an investment when you bought your Scion. You don't want to wonder if there's someone under the hood who doesn't know what he's doing. Get on the road again with no worries: Take your car to an authorized Scion dealership and you'll know your ride is in good hands.

A car is only as good as its parts. That's why your Scion is exceptional. Every part is designed to fit perfectly, work like it should and last an amazingly long time. If your car needs work, you want to make sure the parts that are used are just as good as the rest of the vehicle. That's why Scion recommends using only Scion Authorized Parts\* for maintenance and repairs.

Like all Scion products, Scion Authorized Parts are built to the highest standards of quality and performance. And you'll never get cookie-cutter look-alikes; these are parts designed to fit *your* car. So you can be sure they'll maintain the quality, reliability and value of your Scion.

Scion Authorized Parts are also backed by the security of a Scion warranty. When installed by a Scion dealership, all Scion Authorized Parts (with the exception of batteries) are warranted for 12 months from date of installation, regardless of mileage, or the remainder of the New Vehicle Limited Warranty, whichever provides greater coverage. Non-Scion Authorized Parts — and any damage or failures resulting from their use — are not covered by any Scion warranty.

Your Scion dealership maintains an extensive inventory of parts to help you get back on the road quickly. And even if they don't have the part you need in stock, you don't have to worry about being without your ride for long. That's because Scion dealerships are linked electronically to Scion's Parts Distribution Centers, so they have quick access to any part you may need.

Top quality, great warranty, factory-back inventory — why trust your ride to anything else? Stick with Scion Authorized Parts.



---

\* Scion Authorized Parts are any Scion brand parts manufactured by or on behalf of Scion or Toyota Motor Corporation for use with Scion vehicles.

You don't like to think about getting in a wreck, but if it happens, there are a few things you should know. Some repair shops and insurance companies may suggest using imitation or used salvage parts to save money. However, these parts don't meet Scion's high standards for quality, fit and corrosion resistance. Plus, imitation and used salvage parts are not covered by any Scion warranty.

**To protect your vehicle's appearance, performance and safety, Scion recommends using only Scion Authorized Parts for collision repairs. It is especially important to use Scion Authorized Parts for the repair of Supplemental Restraint Systems (also known as air bags).**

Scion believes you have the right to choose the types of parts used in the repair of your vehicle. That's why Scion supports full disclosure by repair shops and insurance companies regarding parts used for collision repairs. The following information is provided to help you understand the different types of parts that could be used to repair your vehicle.

### Types of Collision Repair Parts

"Collision repair parts" or "replacement crash parts" are the parts typically replaced during the repair of a vehicle that has been damaged in a collision. These parts include exterior sheet metal such as fenders, hoods, doors and related components, as well as plastic components such as bumper covers and lamp assemblies. These are the basic types of collision repair parts:

**New original-equipment manufacturer (OEM):** Parts that are made by the vehicle manufacturer or one of its licensees and distributed through its normal channels. These parts keep the vehicle manufacturer's warranty coverage intact.

**Aftermarket or imitation:** Parts that are made by companies other than the vehicle manufacturer or its licensees.

**Recycled or used salvage:** Used parts and assemblies that have been removed from another vehicle. There are no systems in place to regulate the quality or safety of these parts.

**Remanufactured:** Parts that have been returned to like-new condition through repair, refurbishing or rebuilding.

### Warranty Coverage


Warranties for collision repair parts are provided by the manufacturer or distributor of the parts. Warranty coverage varies. Your insurance company or collision repair facility should provide you with written warranty statements for all parts used in the repair of your vehicle.

Scion warranty coverage remains intact only when vehicle repairs are completed with Scion Authorized Parts. Scion warranties do not cover imitation or used salvage parts or any damage or failures caused by the use of such parts.

## » Lifetime Guarantee Replacement Parts

Scion believes in its products. That confidence is backed by outstanding warranty coverage — including a lifetime guarantee on replacement mufflers, exhaust pipes, shock absorbers, struts and strut cartridges. When purchased at and installed by a Scion dealership, these Scion Authorized Parts are guaranteed to the original purchaser for the life of the vehicle. This includes coverage for parts *and* labor.

Compare the guarantees offered on these parts by aftermarket repair facilities; you'll find that many shops don't offer the extensive coverage Scion does. And remember that only Scion Authorized Parts are built to fit your Scion perfectly. So don't compromise: When replacement time comes, count on your Scion dealership for the peace of mind that comes with a factory-backed lifetime guarantee.

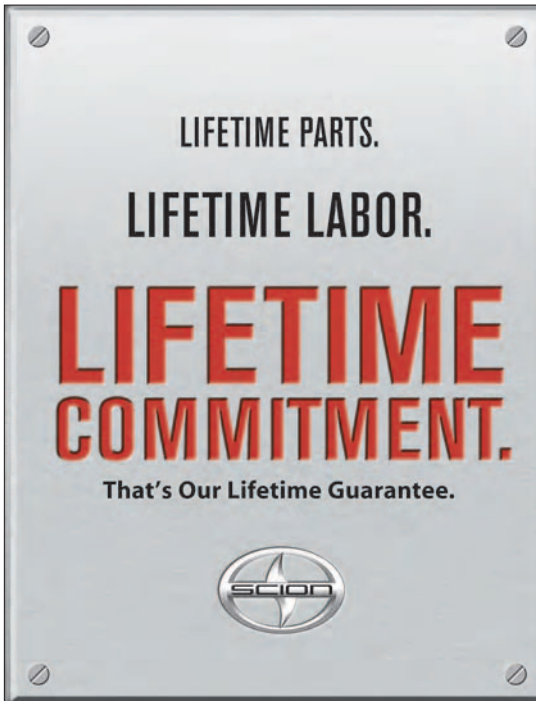

For complete details of the Scion Lifetime Guarantee, see an authorized Scion dealership.

Now that your Scion is on the street, it's time to get personal. That means making your car a reflection of your life and your style. Whether you go mild or wild, be sure to accessorize without sacrificing quality, performance or safety. You can do it with Scion Authorized Accessories.\*

Scion offers dozens of accessory products to help you make your vehicle truly your own. Many are produced in conjunction with cutting-edge suppliers such as OBX Racing Sports and Bazooka Mobile Audio. All are designed to ensure exceptional quality, precise fit to your Scion and performance you can count on. Aftermarket accessories can't always make that claim.

The quality of Scion Authorized Accessories is also backed by the integrity of a Scion warranty. If an accessory is installed during the New Vehicle Limited Warranty period (36 months/36,000 miles), coverage is for the remainder of that period. Otherwise, coverage is for 12 months from date of purchase, regardless of mileage. Keep in mind that installing non-Scion Authorized Accessories may affect your vehicle's warranty coverage. In addition, some aftermarket equipment may not be street-legal in all states and could affect your vehicle's performance or safety.



**COLORED STEERING WHEEL**



**AM/FM 6-DISC CD CHANGER**

Make your Scion what you want it to be, but make it that way with no worries. Choose Scion Authorized Accessories, available exclusively from and installed by your Scion dealership.



**SPORT PEDALS BY OBX**

\* Scion Authorized Accessories are any Scion brand accessories manufactured by or on behalf of Scion or Toyota Motor Corporation for use with Scion vehicles.

Do you plan to do some of your own maintenance and repair work on your car? If so, a Scion service manual will be one of your most important tools. Scion offers three types of manuals to assist do-it-yourselfers. To order any of the following manuals, call Scion's service publications department at (800) 622-2033.

### **Vehicle Repair Manual**

This is the same manual used by professional technicians in Scion dealerships throughout the United States. It is fully illustrated and includes maintenance and repair procedures for all vehicle mechanical systems. It also includes instructions for vehicle tune-ups.


### **Electrical Systems Manual**

This manual provides detailed wiring diagrams for each electrical system in your vehicle, along with troubleshooting tips and repair procedures.

### **Automatic Transmission/Transaxle Repair Manual**

This manual includes complete procedures for overhauling the automatic transmission/transaxle of your vehicle.

For information on basic do-it-yourself maintenance items, check out the "Vehicle Maintenance and Care" and "Do-It-Yourself Maintenance" sections of the *Owner's Manual*.

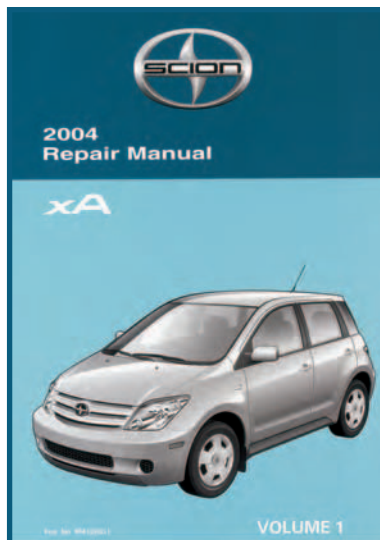

Toyota Extra Care Vehicle Service Agreements enhance the scope and/or length of coverage of your vehicle's factory warranty, or provide protection if the original warranty has expired.<sup>1</sup> Toyota Extra Care provides for the repair or replacement of covered components that have mechanical failures and protects you from rising repair costs in the future. In addition, many plans include benefits such as towing, substitute transportation and travel protection with lodging and meals.

Toyota Extra Care Vehicle Service Agreements are accepted at all participating Scion and Toyota dealerships in the United States. That means repairs are made only by factory-trained service technicians using Scion Authorized Parts.

Toyota Financial Services offers several Toyota Extra Care Vehicle Service Agreement plans, each with a variety of time and mileage options.<sup>2</sup> Your Scion dealer can help you select the plan that best meets your needs.

---

<sup>1</sup> Vehicle service agreements are offered by Toyota Motor Insurance Services, Inc., administered by Toyota Motor Services Company in certain states. In Florida, offered by Toyota Motor Insurance Company.

<sup>2</sup> Toyota Financial Services is a service mark of Toyota Motor Insurance Services, Inc.

### Determining the Proper Maintenance Interval

Depending on your circumstances, you should obtain maintenance for your Scion every 5,000 miles or every 7,500 miles. Follow these guidelines to determine which interval to use.

#### 5,000-Mile Intervals

Use 5,000-mile intervals if you primarily operate your vehicle under any of the following conditions:

- > Driving on unpaved or dusty roads.
- > Using a car-top carrier.
- > Repeated trips of less than five miles in temperatures below freezing.

#### 7,500-Mile Intervals

Use 7,500-mile intervals if you primarily operate your vehicle under conditions other than those listed above.

**Note:** If you drive your vehicle under any of the special operating conditions noted on the following page, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

### Special Operating Conditions

In addition to standard maintenance items for both 5,000-mile and 7,500-mile intervals, the scheduled maintenance log indicates services that should be performed on vehicles that are driven under especially demanding conditions. Specific conditions require specific services, as indicated on the following page. The scheduled maintenance log indicates at which mileage/time intervals each service should be performed.

You should perform these additional maintenance services if you drive primarily under any of the conditions noted. If you drive only occasionally under these conditions, it is not necessary to perform the additional services.

### **Driving on Rough, Muddy or Snow-Melted Roads**

- > Inspect ball joints and dust cover
- > Inspect brake linings/drums and brake pads/discs
- > Inspect drive shaft boots
- > Inspect nuts and bolts on chassis and body
- > Inspect steering linkage and boots
- > Rotate tires

### **Driving on Unpaved or Dusty Roads**

- > Inspect brake linings/drums and brake pads/discs
- > Inspect or change engine air filter

### **Extensive Idling or Low-Speed Driving for Long Distances**

- > Inspect brake linings/drums and brake pads/discs

### **Using a Car-Top Carrier**

- > Inspect brake linings/drums and brake pads/discs
- > Inspect nuts and bolts on chassis and body
- > Replace automatic transmission fluid
- > Replace differential oil

## >> Explanation of Maintenance Items

The following descriptions are provided to give you a better understanding of the maintenance items that should be performed on your vehicle. The scheduled maintenance log indicates at which mileage/time intervals each item should be performed. Please note that many maintenance items should be performed only by a qualified technician.

For further information on maintenance items you can perform yourself, see the “Vehicle Maintenance and Care” and “Do-It-Yourself Maintenance” sections of the *Owner’s Manual*.

### **Automatic Transmission Fluid**

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

### **Ball Joints and Dust Covers**

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

### **Brake Lines and Hoses**

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

### **Brake Linings/Drums and Brake Pads/Discs**

Check the brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check the pads for excessive wear and the discs for runout, excessive wear and fluid leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

### **Differential Oil**

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

### Drive Belts

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

### Drive Shaft Boots

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any deteriorated or damaged parts and, if necessary, repack the grease. A qualified technician should perform these operations.

### Engine Air Filter

Replace at specified intervals. When performing inspections, check for damage, excessive wear and oiliness, and replace if necessary.

### Engine Coolant

Drain and flush the cooling system and refill with an ethylene-glycol type coolant. Inspect the radiator, condenser and/or intercooler for leaves, dirt and insects and clean if necessary. Inspect hoses and connections for corrosion and leaks. Tighten connections and replace parts as necessary. A qualified technician should perform these operations.

**Note:** Your Scion is equipped with Genuine Toyota Super Long-Life Coolant. The replacement intervals for engine coolant recommended in this booklet are based on replacement with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids). If another type of ethylene-glycol coolant is used, replacement intervals may be different.

### Engine Oil and Oil Filter

Replace the oil filter and drain and refill the engine oil at specified intervals. For recommended oil grade and viscosity, refer to the *Owner's Manual*.

### Engine Valve Clearance

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

### **Exhaust Pipes and Mountings**

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

### **Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses**

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

### **Fuel Tank Cap Gasket**

Visually inspect for cracks, deterioration and damage and replace if necessary.

### **Nuts and Bolts on Chassis and Body**

Re-tighten the seat-mounting bolts and front/rear suspension member retaining bolts to specified torque.

### **Radiator Core and Condenser**

Inspect for damage, debris, dirt, insects and signs of leakage. Have any problem repaired by a qualified technician.

### **Spark Plugs**

Replace at specified intervals. Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

### **Steering Gear Box**

Inspect for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

### **Steering Linkage and Boots**

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

### **Tire Rotation**

Tires should be rotated according to the instructions in the *Owner's Manual*. When rotating tires, check for damage and uneven wear. Replace if necessary.

Model \_\_\_\_\_

In-service date \_\_\_\_\_

Selling dealership \_\_\_\_\_

Key number \_\_\_\_\_

Body style \_\_\_\_\_

Mileage at delivery \_\_\_\_\_

Selling dealership phone number \_\_\_\_\_

Vehicle Identification Number \_\_\_\_\_

## » Following the Charts

The scheduled maintenance log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of 1,250 miles per month. If you drive more than 1,250 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

If you choose 5,000-mile intervals, follow the instructions below the plum-colored bars, such as this one:

**5,000 Miles or 4 Months**

If you choose 7,500-mile intervals, follow the instructions below the blue bars, such as this one:

**7,500 Miles or 6 Months**

At 15,000-mile increments, the 5,000-mile and 7,500-mile intervals coincide. Therefore, the colored bars appear together, as in this example:

**15,000 Miles or 12 Months**

**15,000 Miles or 12 Months**

Should you be getting maintenance for your Scion every 5,000 miles or every 7,500 miles? See “Determining the Proper Maintenance Interval” on page 10.

To help you get started with regular maintenance, Scion provides your vehicle's first three oil changes on a complimentary basis. While they don't have to be your initial three oil changes, the oil changes must be obtained within 3 years or 36,000 miles (whichever occurs first) of your vehicle's original in-service date. If you bought your Scion used and the previous owner did not use all three oil changes, you are entitled to the remaining complimentary oil changes if your car is still within 3 years or 36,000 miles of its original in-service date.

To obtain a complimentary oil change, call a Scion dealership or participating Toyota dealership to make an appointment. The dealership will verify that the service was performed by completing one of the boxes on the inside back cover of this booklet.

Complimentary oil changes include change of engine oil and oil filter only. You are responsible for the cost of any other services performed at the time of your complimentary oil changes, including other maintenance services listed in the scheduled maintenance log.

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

### 5,000 Miles or 4 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

### 10,000 Miles or 8 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

### 7,500 Miles or 6 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

**15,000 Miles or 12 Months****15,000 Miles or 12 Months**

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Engine coolant level
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake linings/drums and brake pads/discs	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>**

- Inspect engine air filter
- Inspect nuts and bolts on chassis and body

**DEALER SERVICE VERIFICATION:****DATE:****MILEAGE:**

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

## 5,000-Mile Maintenance Intervals

### 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

#### 20,000 Miles or 16 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

#### 25,000 Miles or 20 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

#### 22,500 Miles or 18 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

## 30,000 Miles or 24 Months

## 30,000 Miles or 24 Months

- Replace engine air filter
- Replace engine oil and oil filter<sup>1</sup>
- Replace spark plugs<sup>3</sup>
- Rotate tires
- Inspect the following:
  - Ball joints and dust covers
  - Brake lines and hoses
  - Brake linings/drums and brake pads/discs
  - Differential oil
  - Drive shaft boots
  - Engine coolant level
  - Exhaust pipes and mountings
  - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - Fuel tank cap gasket
  - Radiator core and condenser
  - Steering gear box
  - Steering linkage and boots
  - Transmission fluid or oil

### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect nuts and bolts on chassis and body
- Replace differential oil<sup>4</sup>
- Replace manual transmission oil

### DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

<sup>3</sup> Required under the terms of the Emission Control Warranty.

<sup>4</sup> Applies to manual transmission models only.

## 5,000-Mile Maintenance Intervals

### 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

#### 35,000 Miles or 28 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

#### 40,000 Miles or 32 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

#### 37,500 Miles or 30 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

**45,000 Miles or 36 Months****45,000 Miles or 36 Months**

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Engine coolant level
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake linings/drums and brake pads/discs	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>**

- Inspect engine air filter
- Inspect nuts and bolts on chassis and body

**DEALER SERVICE VERIFICATION:****DATE:****MILEAGE:**

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

### 50,000 Miles or 40 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

### 55,000 Miles or 44 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

### 52,500 Miles or 42 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

## 60,000 Miles or 48 Months

## 60,000 Miles or 48 Months

- Replace engine air filter
- Replace engine oil and oil filter<sup>1</sup>
- Replace spark plugs<sup>3</sup>
- Rotate tires
- Inspect the following:
 

<ul style="list-style-type: none"> <li><input type="checkbox"/> Ball joints and dust covers</li> <li><input type="checkbox"/> Brake lines and hoses</li> <li><input type="checkbox"/> Brake linings/drums and brake pads/discs</li> <li><input type="checkbox"/> Differential oil</li> <li><input type="checkbox"/> Drive belts<sup>4</sup></li> <li><input type="checkbox"/> Drive shaft boots</li> <li><input type="checkbox"/> Engine coolant level</li> <li><input type="checkbox"/> Engine valve clearance</li> </ul>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Exhaust pipes and mountings</li> <li><input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li><input type="checkbox"/> Fuel tank cap gasket</li> <li><input type="checkbox"/> Radiator core and condenser</li> <li><input type="checkbox"/> Steering gear box</li> <li><input type="checkbox"/> Steering linkage and boots</li> <li><input type="checkbox"/> Transmission fluid or oil</li> </ul>
--	---

**Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>**

- Inspect nuts and bolts on chassis and body
- Replace transmission fluid or oil
- Replace differential oil

**DEALER SERVICE VERIFICATION:**

DATE:

MILEAGE:

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

<sup>3</sup> Required under the terms of the Emission Control Warranty.

<sup>4</sup> Initial inspection at 60,000 miles. Inspect every 15,000 miles thereafter.

## 5,000-Mile Maintenance Intervals

### 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

#### 65,000 Miles or 52 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

#### 70,000 Miles or 56 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

#### 67,500 Miles or 54 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

75,000 Miles or 60 Months

75,000 Miles or 60 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Engine coolant level
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake linings/drums and brake pads/discs	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive shaft boots	

**Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>**

- Inspect engine air filter
- Inspect nuts and bolts on chassis and body

**DEALER SERVICE VERIFICATION:****DATE:****MILEAGE:**

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

## 5,000-Mile Maintenance Intervals

### 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

#### 80,000 Miles or 64 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

#### 85,000 Miles or 68 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

#### 82,500 Miles or 66 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

## 90,000 Miles or 72 Months

## 90,000 Miles or 72 Months

- Replace engine air filter
- Replace engine coolant<sup>3</sup>
- Replace engine oil and oil filter<sup>1</sup>
- Replace spark plugs<sup>4</sup>
- Rotate tires
- Inspect the following:
  - Ball joints and dust covers
  - Brake lines and hoses
  - Brake linings/drums and brake pads/discs
  - Differential oil
  - Drive belts
  - Drive shaft boots
  - Engine coolant level
  - Exhaust pipes and mountings
  - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - Fuel tank cap gasket
  - Radiator core and condenser
  - Steering gear box
  - Steering linkage and boots
  - Transmission fluid or oil

### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect nuts and bolts on chassis and body
- Replace differential oil<sup>5</sup>
- Replace manual transmission oil

### DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

<sup>3</sup> Initial replacement at 90,000 miles/72 months. Replace every 50,000 miles/40 months thereafter. See page 13 for additional information.

<sup>4</sup> Required under the terms of the Emission Control Warranty.

<sup>5</sup> Applies to manual transmission models only.

## 5,000-Mile Maintenance Intervals

### 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

#### 95,000 Miles or 76 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

#### 100,000 Miles or 80 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

#### 97,500 Miles or 78 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

**105,000 Miles or 84 Months****105,000 Miles or 84 Months**

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Engine coolant level
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake linings/drums and brake pads/discs	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive shaft boots	

**Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>**

- Inspect engine air filter
- Inspect nuts and bolts on chassis and body

**DEALER SERVICE VERIFICATION:****DATE:****MILEAGE:**

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 10.

### 110,000 Miles or 88 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

### 115,000 Miles or 92 Months

- Replace engine oil and oil filter<sup>1</sup>

#### Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>

- Inspect the following:
  - Ball joints and dust covers
  - Brake linings/drums and brake pads/discs
  - Drive shaft boots
  - Engine air filter
  - Nuts and bolts on chassis and body
  - Steering linkage and boots
- Rotate tires

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

### 112,500 Miles or 90 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires

**Note:** If you drive your vehicle under any of the special operating conditions noted on pages 10–11, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

## 120,000 Miles or 96 Months

## 120,000 Miles or 96 Months

- Replace engine air filter
- Replace engine oil and oil filter<sup>1</sup>
- Replace spark plugs<sup>3</sup>
- Rotate tires
- Inspect the following:
  - Ball joints and dust covers
  - Brake lines and hoses
  - Brake linings/drums and brake pads/discs
  - Differential oil
  - Drive belts
  - Drive shaft boots
  - Engine coolant level
  - Engine valve clearance
  - Exhaust pipes and mountings
  - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - Fuel tank cap gasket
  - Radiator core and condenser
  - Steering gear box
  - Steering linkage and boots
  - Transmission fluid or oil

**Additional Maintenance Items for Special Operating Conditions:<sup>2</sup>**

- Inspect nuts and bolts on chassis and body
- Replace transmission fluid or oil
- Replace differential oil

**DEALER SERVICE VERIFICATION:**

DATE:

MILEAGE:

<sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.<sup>2</sup> Specific services apply to specific operating conditions. See pages 10–11 for details.<sup>3</sup> Required under the terms of the Emission Control Warranty.



## **You Are Entitled to Three Complimentary Oil Changes for Your 2004 Scion**



These oil changes must be obtained within 3 years or 36,000 miles (whichever occurs first) of your vehicle's original in-service date. To set up an appointment for a complimentary oil change, call your Scion dealership or participating Toyota dealership. See page 16 to determine how often you should change your vehicle's oil.

After performing a complimentary oil change, the dealership will complete one of the boxes below. Remember that changing the oil is just one of the maintenance services that should be performed regularly on your Scion. Make sure that all the other services recommended in this booklet are performed on your car as well.

Please note that you are responsible for the cost of any other services performed at the time of your complimentary oil changes, including other maintenance services listed in the scheduled maintenance log.

### **Complimentary Oil Change #1**

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

### **Complimentary Oil Change #2**

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

### **Complimentary Oil Change #3**

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

